

# DAILY DRIVER OPERATING GUIDE: FRONT FORK, MANUAL

## GUIDELINES TO MAXIMIZE PICKUP WEIGHT ACCURACY


- Lift the bin completely off of the ground smoothly, stop the forks in a level position in the weighing zone. Press the “weight capture” button, wait for a “two beep” audible signal from the meter, then dump the bin.
- Lower the empty bin and stop in the weighing zone with level forks, press the “weight capture” button, wait for a “two beep” audible signal from the meter, then gently return bin to the ground.
- When the meter emits “two beeps”, the weight has been captured.
- If picking a bin from a dock, bring it down into the weighing zone before pressing the “weight capture” button.
- Manually decrease the customer number for multiple bins at the same customer for accurate customer tracking.
- Weigh in and out of the landfill or transfer station to determine the actual truck net weight. If not, ensure an accurate empty weight is on file.
- Enter in the landfill or transfer station net weight for data recording and downloading records.

## VULCAN CUSTOMER SERVICE

**1-800-237-0022**

HOURS:  
7:30 a.m. - 5:00 p.m.  
PACIFIC TIME

## UP AND DOWN LIFT CYCLE

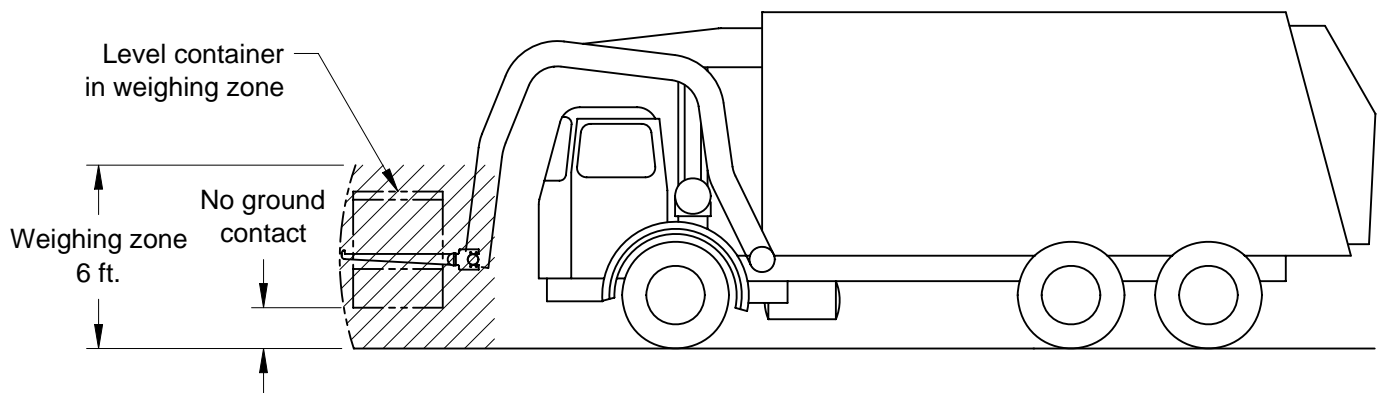

### INSTALLATION NOTE:

Please wire tie this driver card to the Vulcan V600 Meter bracket.

### DRIVER NOTE:

Please place this driver card on visor or clipboard to use as a quick reference guide.