

OPERATING INSTRUCTIONS – CONCRETE MIXER SCALE

INSTALLATION NOTE:

Please send this driver card, along with other truck documents, to scale end-user.

NOTE TO SCALE SYSTEM USER:

Please place this driver card on visor or clipboard to use as a quick reference guide.

For Product Assistance, contact:
VULCAN CUSTOMER SERVICE
1-800-237-0022
Hours: 7:30 a.m. – 5:00 p.m.
PACIFIC TIME

OPERATING INSTRUCTIONS – CONCRETE MIXER SCALE

How To Obtain Accurate Weight Readings For Each Load:

1. Stop the drum rotation and wait for the concrete to settle.
2. Drive the truck for a short distance (up to ¼ mile) to further settle the material.
3. Stop the truck on level ground and read the weight displayed on the meter.

